

# THYRISTOR UNIT 1( )PHB SERIES INSTRUCTION MANUAL

IMTHYCO17-E2

## <INTRODUCTION>

Thank you very much purchasing our '1( )PHB series'.

This manual describes how to use '1( )PHB series' instruments. Please read this manual carefully before using the instruments.

Also keep this manual with much care for future reference.

## WARNING

### \* Wiring precautions

1. If failure or error of this instrument could result in a critical accident of the system, install an external protection circuit to prevent such an accident.
2. In order to prevent instrument damage or failure, protect the power line and the input/output lines from high currents by using fuses with appropriate ratings.

### \* Power supply

1. In order to prevent instrument damage or failure, supply power of the specified rating.
2. In order to prevent electric shock or instrument failure, do not turn on the power supply until all of the wiring is completed.

### \* Never use the instrument near inflammable gases.

1. In order to prevent fire, explosion or instrument damage, never use this instrument at a location where inflammable or explosive gases or exist.

### \* Never touch the inside of the instrument.

1. In order to prevent electric shock or burns, never touch the inside of the instrument. Only RKC service engineers can touch the inside of the instrument to check the circuit or to replace parts.  
High voltage and high temperature sections inside the instrument are extremely dangerous.

### \* Never modify the instrument.

1. In order to prevent accident or instrument failure, never modify the instrument.

### \* Maintenance

1. In order to prevent electric shock, burns or instrument failure, only RKC service engineers may replace parts.
2. In order to use this instrument continuously and safely, conduct periodic maintenance. Some parts used this instrument have a limited service life and may deteriorate over time.

R K C I N S T R U M E N T I N C .

## CONTENTS

1. BEFORE READING THIS MANUAL -----	2
2. MOUNTING OPERATION -----	3
3. MODEL CODE -----	3
4. DIMENSIONS -----	3
5. WIRING EXAMPLE -----	4
6. CAUTION FOR MOUNTING -----	6
7. REFERENCE -----	6
8. CHECK, MAINTENANCE, TROUBLESHOOTING -----	7
9. PRODUCT SPECIFICATIONS -----	8

### 1. BEFORE READING THIS MANUAL

#### 1.1 USERS OF THIS MANUALS

This manual is prepared for all personnel who use '1( )PHB '. This manual is also written especially for readers who have a fundamental knowledge of electrical engineering, control engineering or communication.

#### 1.2 CAUTIONS

1. The contents of this manual may subject to change without prior notice.
2. Examples of figures, diagrams and numeric values used in this manual are for a better understanding of the text, but not for assuring the resultant operation.
3. The contents of this manual are copy righted; all rights are reserved by RKC INSTRUMENT INC. It is prohibited to reprint or reproduce the whole or a part of this manual without the prior of RKC INSTRUMENT INC.
4. '1( )PHB series' and this manual are manufactured and prepared under strict quality control before delivery. However, if any problems arise, please contact us directly or your nearest our sales agent.
5. RKC assumes no responsibility for any of the following damages which the user or third party may suffer.
  - 5.1 Damage incurred as a result of using this product
  - 5.2 Damage caused by product failure which cannot be predicted by RKC
  - 5.3 Other indirect damages

#### 1.3 For safe operation of '1( )PHB series'

1. '1( )PHB series must be used under the following conditions.
 

'1( )PHB series is a component type and is used after mounting on an Instrument panel. It is thus manufactured as a component destined for the final product, so its high-voltage blocks such as the power terminals are uncovered. Therefore, after it is installed on the final product, the final product supplier must take the necessary measures for the user to prevent touching directly the high-voltage blocks.
2. For correct and safe operation of '1( )PHB series ', always observe the safety precautions described in this manual when performing operations, maintenance and repair work. RKC neither assures responsibility nor provides warranty for problems or accidents occurring if these precautions are not observed.

#### 1.4 For safe operation of '1( )PHB series', the following 'Signal Words' and 'Symbol Marks' are used in this manual.

##### (Signal Words)

**WARNING :** Where there are possible dangers such as electric shock, fire (burns), etc. which could cause loss of life or injury, precautions to avoid such dangers are described.

**CAUTION :** These describe precautions to be taken if unit damage may result if operating procedures are not strictly followed.

**NOTE :** Extra notes or precautions are added to operating procedures and explanations.

##### (Symbol Marks)

! : This mark is used when great care is needed especially for surety


\* : This mark is used to add extra notes, precautions or supplementary explanations to table and figures.

## 2. Caution for mounting ( Avoid the following when selecting the mounting location )

- Should be used indoors where the system is not exposed to direct sunlights.
- Ambient humidity of less than 45% or more than 85%RH. Water, oil, chemicals, vapor or steam splashes.
- Corrosive or inflammable gases.
- Direct vibration or shock to the mainframe.
- Excessive induction noise, static electricity, magnetic fields or noise.

## 3. Model Code

1 □ P H B - □ □ □ - □

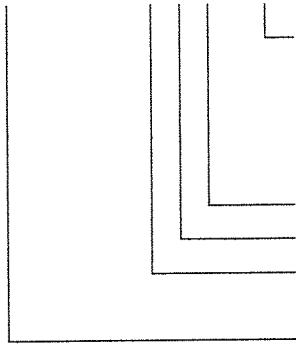

Option -1 : Automatic/Manual transfer or gradient setting  
 -4 : Fuse burnout alarm (Only for the type with fuse )  
 -5 : High - Low control  
 -F : With fast blow fuse  
 -T : Optional power supply voltage (120V AC or 240V AC)


Input 6 : 1 to 5V DC, 8 : 4 to 20mA DC

Applicable Load R : Resistive load, L : Inductive load


Maximum Load current, 020 : 20A, 030 : 30A, 050 : 50A,  
 070 : 70A, 100 : 100A, 150 : 150A, 200 : 200A

Power supply voltage 1 : 100V AC or 110V AC ( Either of specify )  
 2 : 200V AC or 220V AC ( Either of specify )  
 3 : 380V AC  
 4 : 400V AC or 440V AC ( Either of specify )


## 4. External Dimension (Unit : mm)

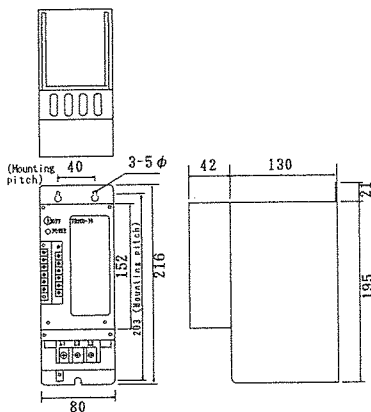



20, 30A

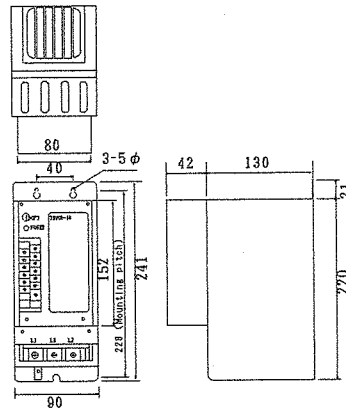


50A

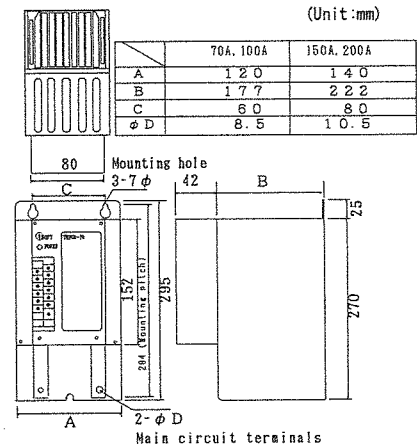

70, 100, 150, 200A

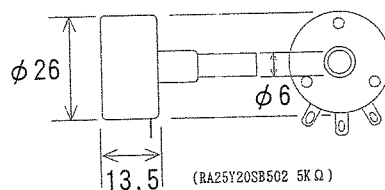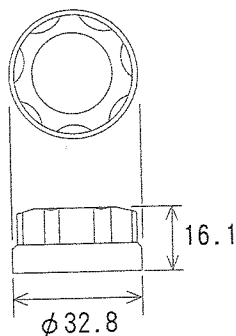

Setting volume and Scale board

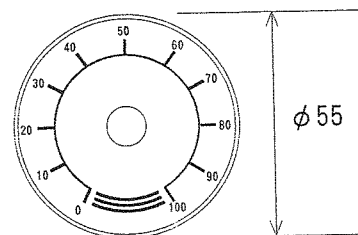


## 5.EXTERNAL WIRING

### 5-1 . Auto mode


This power adjuster performs phase control by disconnecting or connecting one line in the load circuit of the adjuster.(Between the L1 and L2 terminals). Therefore, for the power lines to be connected to these terminals, select the line size meeting the load current capacity.

In addition, the L3 terminal is used to provide the operating power of the thyristor itself, while the power taken from the L1 terminal is used for the internal use of the adjuster. For this reason, no specially thick power line connected to L3 is required. For details on the current flowing into the L3 terminal, see the power consumption in the product specification on P.8.

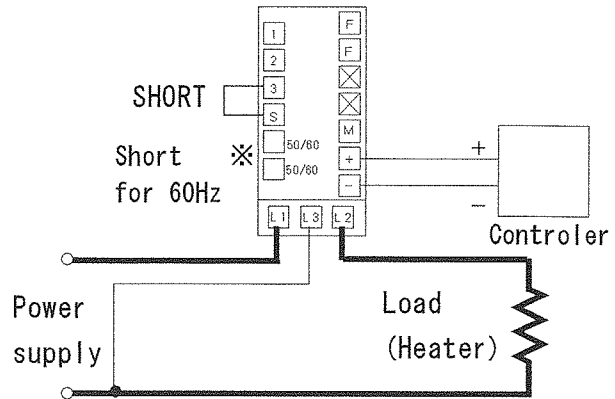

### 5-2. Manual Mode


For the type with the optional function added, (Cord: -1), its output can be manually adjusted by connecting the attached variable resistor. In this case, always short the M and + input terminals.

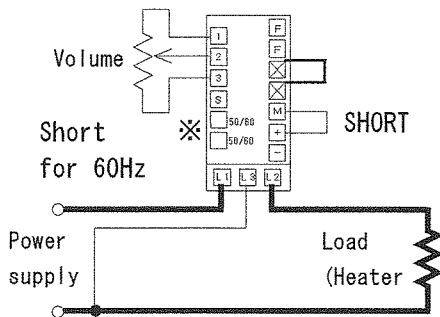

### 5-3. Auto (With gradient setting) / Manual mode



For the type with the optional function added, (Cord: -1), it is possible to switch between automatic and manual by using the attached variable resistor and a selector switch.

(Selector switch to be supplied by the user)

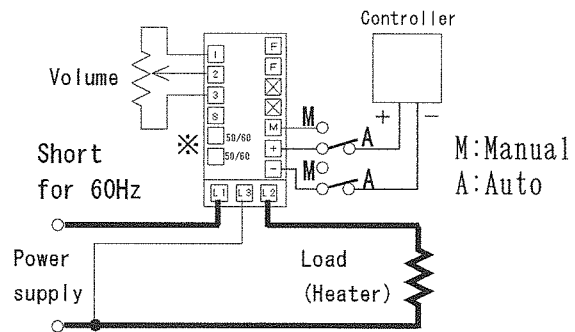

## 4. Gradient setting

The output can be restricted by connecting the attached variable resistor as a gradient setter.

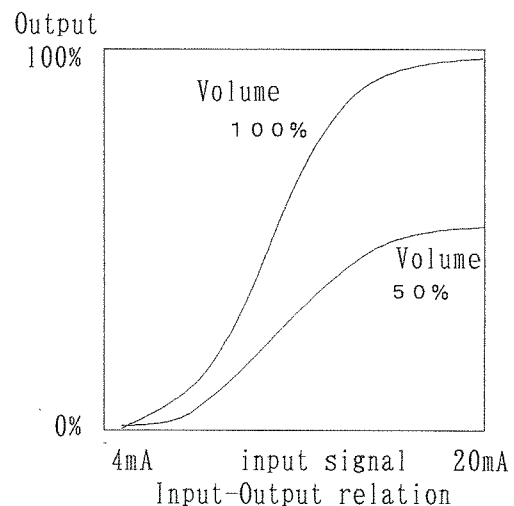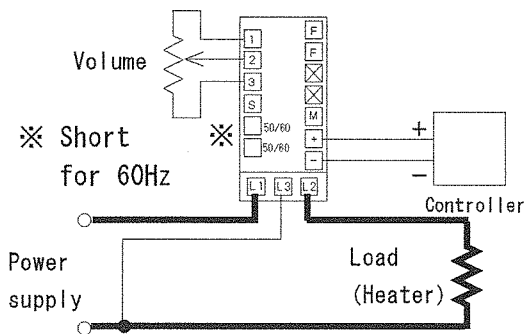


### 5-5. 50Hz/60Hz selection

A power frequency of 50 or 60 Hz can be selected by opening or shorting the 50/60 terminals.

! If the adjuster is used at a power frequency of 60 Hz with the adjuster set to 50 Hz (the 50/60 terminals open), no output may be generated for a low input signal (0 to approx. 20%).


On the contrary, if the adjuster is used at a power frequency of 50 Hz with the adjuster set to 60 Hz (the 50/60 terminals are shorted), the output may not be fully turned off.

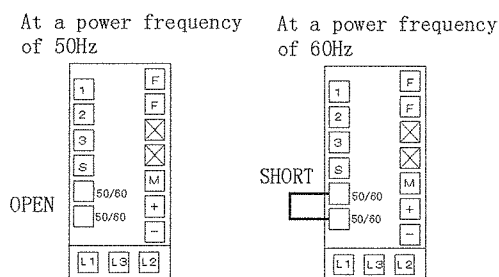

### 5-6. Soft start

This adjuster is provided with a variable type soft start time function of approx. 1 to 10 sec as standard. As this time is set to the minimum value (1 sec side) prior to factory shipment, when soft start is required, set the desired time by turning the setting variable resistor.


! The indicated time corresponds to that until the maximum output is generated on the voltage waveform. Therefore, it may become shorter than that which is actually set.

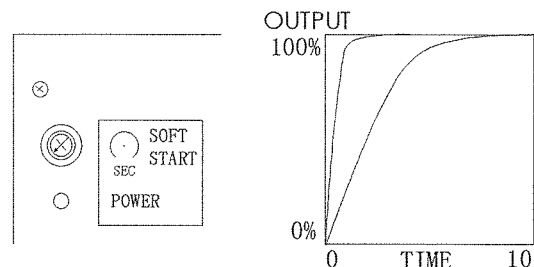

### 5-7. Fuse burnout alarm (Option)


If the built-in fast blow fuse burns out, the fuse burnout alarm relay is turned on, and so an alarm lamp and buzzer can be activated.

! However, note that the fuse burnout alarm output contact capacity is 1A at 250V AC max. even for the thyristor unit in the 300V or 400V line.

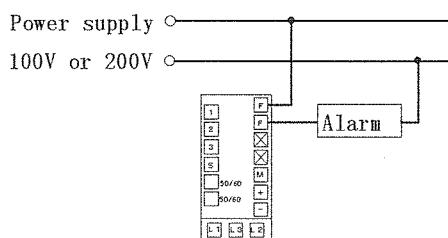


### 5-8. H-L control (Option)

ON/OFF control which restricts the maximum output/minimum output can be performed by selecting the variable resistor on the HIGH or LOW side by the relay contact signal.

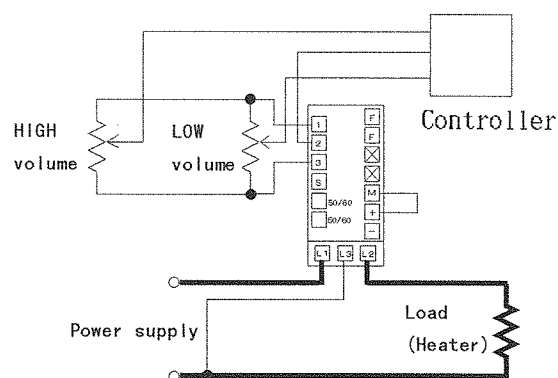

### 5-9. Open delta connection


As the input impedance of this adjuster is approx. 150ohm for the 4 to 20mA input type or approx. 10Kohm for the 1 to 5V input type, usually up to 3 thyristor power adjusters can be simultaneously controlled by using one controller manufactured by us. Usually, the load impedance of our controller is less than 600ohm for the 4 to 20mA output type or more than 1Kohm for the 1 to 5V output type. For details on the load impedance of each controller, see the specification of the respective controller.

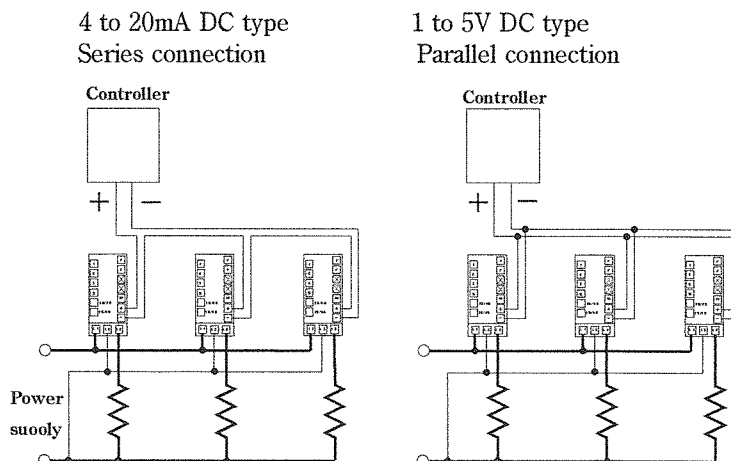

## 6. Mounting precautions

When mounting the adjuster, check its top and bottom then mount it on the wall in the specified orientation. As this adjuster generates much heat, it is cooled by circulating heated air by convection.


Therefore, if it is not mounted as specified such as the wrong way up or mounted on the floor, an accident or fault with the adjuster may result.

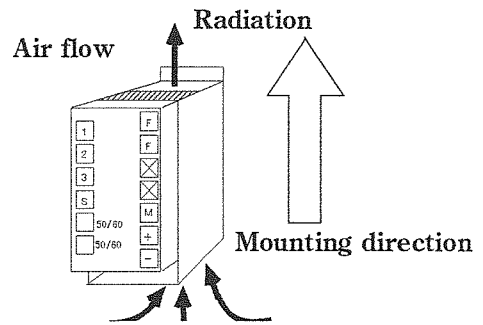

When two or more adjusters are mounted together, make the space between each adjuster as specified in the diagram on the right. If the adjusters are closely mounted, an accident or fault may result from heat generation



Do not mount these adjusters too close together.

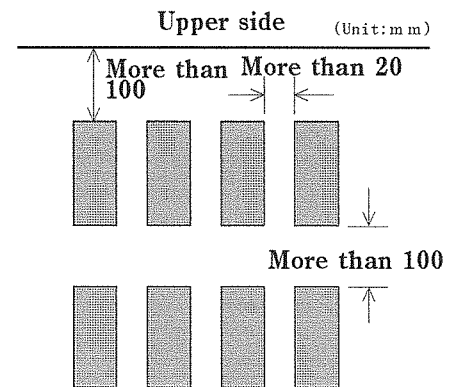


## 7. Reference


### 7- 1. Main Parts

	Thyristor element		Fast fuse	
	100/200 V type	300/400 V type	100/200 V type	300/400 V type
2 0 A	AK25GB- 80	AK25HB- 160	25SHA25	50SHA25
3 0 A	AK25GB- 80	AK25GB- 160	25SHA35	50SHA35
5 0 A	PK55F- 80	PK55F- 160	25SHA55	50SHA55
7 0 A	PK70F- 80	PK70F- 160	25SH75	50SHB75
1 0 0 A	PK90F- 80	PK90F- 160	25SH125	50SHB120
1 5 0 A	PK130F- 80	PK130F- 160	25SH200	50SHB200
2 0 0 A	PK160F- 80	PK160F- 160	25SH230	50SHB235

### 7- 2. Input- output relation

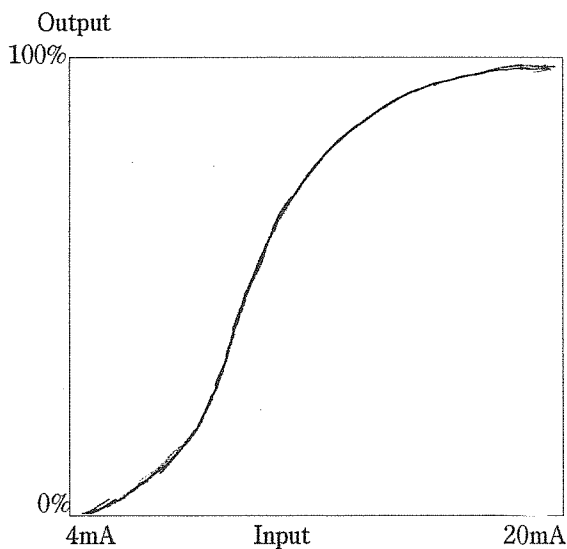

### 7-3. Load current- Temperature relation

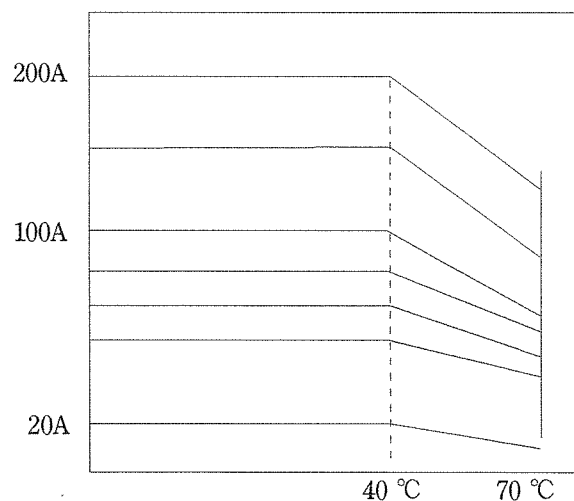

## 8. Inspection, maintenance and troubleshooting

In order to keep this adjuster always working in the best condition, perform the following inspection and maintenance.

### 8-1. Inspection

- (1) Before turning on the power after completing the wiring, re-check the load wiring.
- (2) After turning on the power, check that normal power adjustment is performed.

### 8-2. Maintenance

- (1) If the screws on the power connection terminals are loose, heat generation may result. First, check that the power is not applied to the adjuster, then check that the screws are not loose.
- (2) This adjuster uses parts with limited life span such as electrolytic capacitors, cooling fan, etc. Periodic inspection should be conducted every several years.

### 8-3. Troubleshooting

Most general adjuster faults, causes and remedies are described in the following. Please refer to these for maintenance and inspection. If you have any query concerning this adjuster, please contact our sales office or agent from where you bought it giving the Model No. and specifications.

- (1) No output is generated.
  - \* No normal load voltage is applied. (Example: The adjuster in the 200V line is used in the 100V line.)
  - \* The plus (+) and minus (-) sides of the current input signal are opposite.
  - \* The fuse is burnt out.
  - \* For the Model with the optional function of '1' or '5', the No. 3 terminal is not shorted with the S terminal when the variable resistor is not used.
  - \* (For manual setting) : The No. M terminal is not shorted with the + terminal.
  - \* (For gradient setting control) : The variable resistor in the gradient setter is left set to zero.
  - \* (For H-L control): The variable resistor on the HIGH side is left set to zero.
  - \* Failure inside the adjuster (Thyristor element damage caused by load shorting) → Must be repaired.
- (2) Output continues to be generated
  - \* No load is connected to this adjuster, but it is directly connected to the power. (Incorrect wiring)
  - \* Manual setting continues. (When the manual setting variable resistor is set to 100%)
  - \* (For H-L control): The variable resistor on the LOW side is left set to 100%.
  - \* The input signal from the controller is left at the maximum. → Controller failure
  - \* The adjuster is used at a power frequency of 60 Hz although the adjuster is set to 50 Hz.
  - \* Failure inside the adjuster (Thyristor element damage caused by load shorting) → Must be repaired.
- (3) No normal output is generated.
  - \* No normal load voltage is applied. (No rated voltage is applied.)
  - \* The adjuster output does not match the controller output.  
(Example: An output of 4 to 20mA is connected to an output of 1 to 5V.)
  - \* For gradient setting control : The variable resistor in the gradient setter is left set to zero.
  - \* For H-L control : The variable resistors on the HIGH and LOW sides are not correctly set.
  - \* The adjuster is used at a power frequency of 50 Hz although the adjuster is set to 60 Hz.
  - \* The selection of resistive load (R load)/inductive load (L load) is incorrect.
  - \* Failure inside the adjuster caused by deteriorated parts, etc. → Must be repaired.

## 9. Specifications

Maximum load current	: AC ; 20A, AC ; 30A, AC ; 50A, AC ; 70A, AC ; 100A, AC ; 150A or AC ; 200A (At 40 °C )
Control method	: Phase control method
Applicable load	: Resistive (R) load or inductive (L) load
Load open/close element	: Thyristor module
Minimum load current	: Less than 0.3A
Output control range	: 0 to 98% of primary power supply voltage
Starting method	: Soft start provided as standard; Approx. 1 to 10 sec (Time to reach an output of 98%)
Input	: For Cord "6" ; 1 to 5V DC (Input impedance, Approx. 10K $\Omega$ ) For Cord "8" ; 4 to 20mA DC (Input impedance, Approx. 150 $\Omega$ )
Output protection	: None [Can meet this protection by the use of fast blow fuse (option).]
Power supply voltage	: 100V, 110V, 200V, 220V, 380V, 400V or 440V AC (Can meet 120V or 240V by option.)
Power frequency	: 50Hz or 60Hz (Can be selected by external terminals)
Allowable voltage variation	: Within $\pm 10\%$ of rated value
Cooling method	: Self-cooling (for 20A, 30A, 50A or 70A) or forced-cooling (for 100A, 150A or 200A)
Allowable ambient temperature	: 0 to 40 °C (Maximum load current falls when the ambient temperature is between 40 and 70 °C . See Fig. 7-3 on P.6.)
Allowable relative humidity	: 45 to 85% RH
Environment	: Corrosive gases, dust or vibration shall not exist.
Dielectric strength	: For 1 min. at 1500V AC between the power terminal and frame
Insulation resistance	: More than 50M $\Omega$ between the power terminal and frame (using 500V DC megger)
Power consumption	: For 20A; 2.2VA, for 30A; 2.2VA. for 50A; 2.2VA, for 70A; 2.2VA, for 100A; 10.8VA, for 150A; 13.8VA, or for 200A; 13.8VA
Shape	: For vertical mounting
Dimensions	: See 'Dimensional outline drawing' on P.3.
Weight	: For 20A; Approx. 1.9 kg, for 30A; Approx. 2.1 kg, for 50A; Approx. 2.7 kg, for 70A; Approx. 4.2 kg, for 100A; Approx. 4.6 kg (Approx. 5.0 kg), for 150A; Approx. 7.0 kg (Approx. 7.4 kg) or for 200A; Approx. 7.0 kg (Approx. 7.4kg) ( ) : For the adjuster in the 300V or 400V line.
Option	: - 1 ; Automatic/manual transfer or gradient setting - 4 ; Fuse burnout alarm (Only for the type with fuse: Can be specified.) - 5 ; H-L control - F ; With fast blow fuse - T ; Optional power supply voltage (To be specified; 120V AC, or 240V AC)
Cautions	: (1) Input/output characteristics become non-linear curves. (2) Close mounting is not permitted. (3) Cannot be used for capacitive loads such as capacitors.

**RKC** **RKC INSTRUMENT INC.**  
(RIKA KOGYO CO.,LTD.)

HEAD OFFICE : 16-6, KUGAHARA 5-CHOME, OHTA-KU TOKYO 146 JAPAN  
PHONE : 03-3751-9799 (+81 3 3751 9799)  
Email : KG1 00524 @niftyserve.or.jp  
FAX : 03-3751-8585 (+81 3 3751 8585)