
HBA-22 HBA-T20/T30 HBA-T22/T32 HBA-T23/T33 HBA-T120/T130






General Description

The heater break alarm is a contact output device that monitors the heater current and activates the alarm when the current falls below the set value.

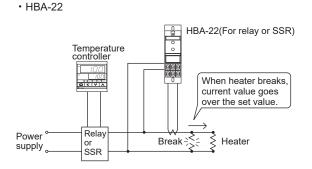

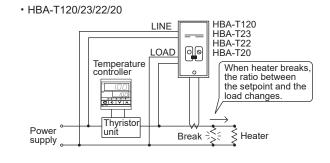



Products List

Model	Output Device	Mounting	CT type	Remarks
HBA-22	Relay, SSR	Wall mounting	CTL-6-P- ☐ (Max 30A) CTL-18S- ☐ (Max 100A)	Suitable when controller's output cycle time is 2 seconds or longer. Use two units for three-phase load.
HBA-T20	Single-phase SCR power controller, SSR, Relay	Panel mounting	CV-1-□	Suitable for phase control and zero-cross control by SCR power control device.
НВА-Т30	Three-phase SCR power controller, SSR, Relay	Panel mounting	CV-1-□ (2 piece/unit)	Suitable for phase control and zero-cross control by SCR power control device.
HBA-T22	Single-phase SCR power controller, SSR, Relay	Panel mounting	CTL-6-P-N	Suitable for phase control and zero-cross control by SCR power control device.
HBA-T32	Three-phase SCR power controller, SSR, Relay	Panel mounting	CTL-6-P-N (2 piece/unit)	Suitable for phase control and zero-cross control by SCR power control device.
HBA-T23	Single-phase SCR power controller, SSR, Relay	Panel mounting	CTL-18S-N	Suitable for phase control and zero-cross control by SCR power control device.
НВА-Т33	Three-phase SCR power controller, SSR, Relay	Panel mounting	CTL-18S-N (2 piece/unit)	Suitable for phase control and zero-cross control by SCR power control device.
HBA-T120	Single-phase SCR power controller, SSR, Relay	DIN-rail mounting and wall mounting	MCTL-6-P-N (Max 30A) MCTL-12-S56-10L-N (Max 100A)	Built-in MCU makes the load setting easy using automatic calculation function. Suitable for phase control and zero-cross control by SCR power control device.
HBA-T130	Three-phase SCR power controller, SSR, Relay	DIN-rail mounting and wall mounting	MCTL-6-P-N (Max 30A) MCTL-12-S56-10L-N (Max 100A) (2 pieces/unit)	Built-in MCU makes the load setting easy using automatic calculation function.Suitable for phase control and zero-cross control by SCR power control device.

HBA-02E

Heater Break Alarm Modules HBA Series



Model and Suffix Code

• HBA-21,22

Specifications	Model and Suffix Code
Model	HBA-22 (for relay contact and SSR control)
Power Supply:	100/110V AC, 200/220V AC
 HBA-T20,T30 	

Model and Suffix Code Specifications HBA-T20 (Single phase type) HBA-T30 (Three phase type) Model Phase angle control Control type Zero-crossing control

··=···==-				
Specifications	Model and Suffix Code			
Model	HBA-T22 (Single phase type) HBA-T32 (Three phase type)			
Control type	Phase angle control Zero-crossing control	P		
Load current	5A 10A 20A 30A		5 10 20 30	

• HBA-T23.T33

- 115/1120,100					
Specifications	Model and Suffix Code				
Model	HBA-T23 (Single phase type) HBA-T33 (Three phase type)				
Control type	Phase angle control Zero-crossing control	P Z			
Load current	30A 100A		30 100		

• HBA-T120,T130


Specifications	Model and Suffix Code		
Model	HBA-T120 (Single phase type) HBA-T130 (Three phase type)		- 🗆
Control type	Control type Phase angle control Zero-crossing control		
	5A (1 to 5A)		5
Load current	30A (6 to 30A) 100A (20 to 100A)		30 100


• CT (Current transformer)


CT (Current transformer)				
Model	Max.Load Current	Applicable products		
CV-1-5	5A			
CV-1-30	30A	HBA-T20, T30 *1		
CV-1-100	100A			
CTL-6-P-5	5A			
CTL-6-P-10	10A			
CTL-6-P-20	20A			
CTL-6-P-30	30A	HBA-22		
CTL-18S-30	30A	TIDITELL		
CTL-18S-30-C	30A			
CTL-18S-100	100A			
CTL-18S-100-C	100A			
CTL-6-P-N	According to HBA module	HBA-T22, T32 *1		
CTL-18S-N	According to HBA module	HBA-T23, T33 *1		
MCTL-6-P-N	According to HBA module	HBA-T120-5/30,HBA-T130-5/30 *1		
MCTL-12-S56-10L-N	According to HBA module	HBA-T120-100,HBA-T130-100 *1		
*1 HBA-T30 T32 T33 and T130 require 2 CTs per unit				




External Dimensions

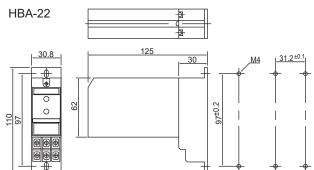


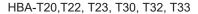


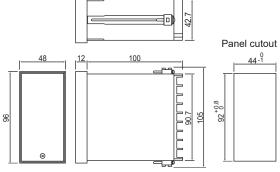


HBA-T120,T130

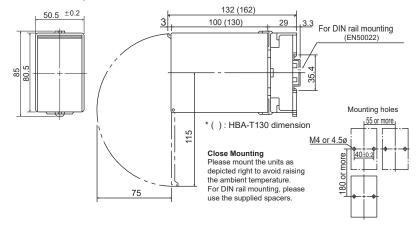

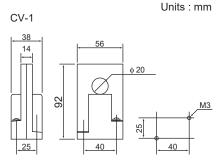

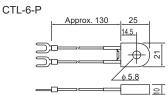

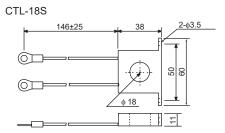



MCTL-12-S56-10L-N

