







SRZP-01/SRZP-02/SRZP-03 取扱説明書

[SRZ 用アクセサリ]

FEB.2020

IMS01T43-X1

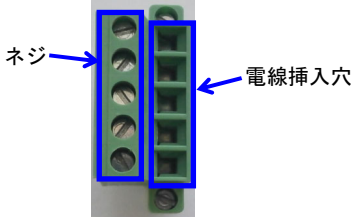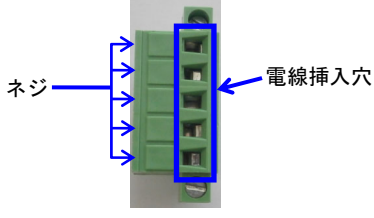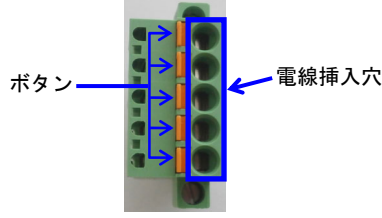
SRZ コネクタタイプモジュールの場合、入出力用コネクタ (プラグ側) は以下のコネクタ (別売り) を使用してください。

SRZP-01 (フロントネジタイプ)	SRZP-02 (サイドネジタイプ)	SRZP-03 (プッシュインタイプ)
		
使用電線仕様: 単線および撚り線: AWG 24 (断面積 0.205 mm²) - 12 (断面積 3.309 mm²) 適正むきしろ: 9~10 mm 	使用電線仕様: 単線: AWG 28 (断面積 0.081 mm²) - 12 (断面積 3.309 mm²) 撚り線: AWG 30 (断面積 0.051 mm²) - 12 (断面積 3.309 mm²) 適正むきしろ: 7~8 mm 	使用電線仕様: 単線および撚り線: AWG 26 (断面積 0.129 mm²) - 12 (断面積 3.309 mm²) 適正むきしろ: 10~11 mm 
接続方法 1. マイナスドライバでネジを緩めます。 2. 電線挿入穴に電線を挿入します。 3. マイナスドライバでネジを締めます。 ネジサイズ: M2.5 推奨締付トルク: 0.43~0.50 N・m		接続方法 1. マイナスドライバでボタンを押しながら、電線挿入穴に電線を挿入します。 2. ボタンからマイナスドライバを放すと接続されます。
 重要 電線接続後は、電線を軽く引っ張って、固定されていることを確認してください。		


■ 外形寸法 (コネクタ取付時)

(単位: mm)

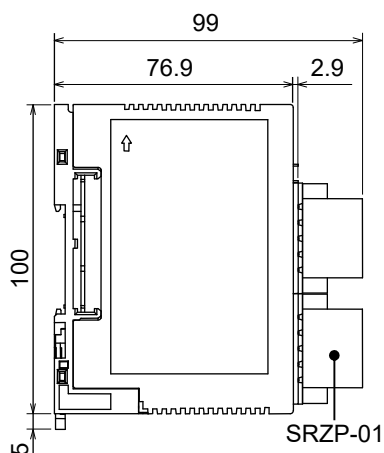
SRZP-01 (フロントネジタイプ)









SRZP-02 (サイドネジタイプ)

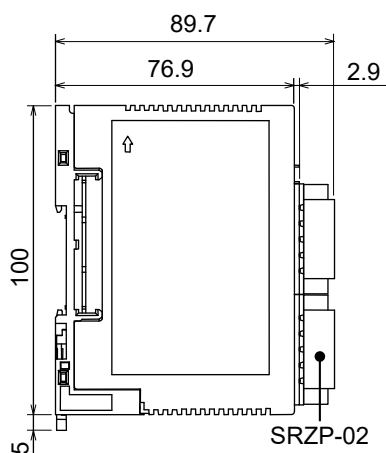

SRZP-03 (プッシュインタイプ)

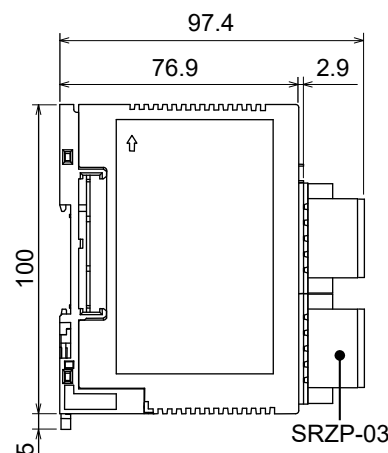

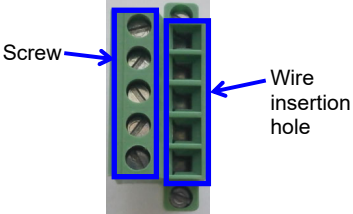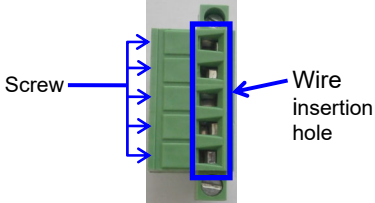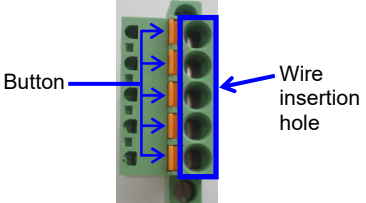For the SRZ connector type module, use the following our connector (plug) [sold separately].

SRZP-01 (Front-screw type)	SRZP-02 (Side-screw type)	SRZP-03 (Push in type)
		
Used wire specifications: Lead wire type: Solid and twisted wire: AWG 24 [cross-section: 0.205 mm²] to 12 [cross-section: 3.309 mm²] Stripping length: 9 to 10 mm 	Used wire specifications: Lead wire type: Solid: AWG 28 [cross-section: 0.081 mm²] to 12 [cross-section: 3.309 mm²] Twisted wire: AWG 30 [cross-section: 0.051 mm²] to 12 [cross-section: 3.309 mm²] Stripping length: 7 to 8 mm 	Used wire specifications: Lead wire type: Solid and twisted wire: AWG 26 [cross-section: 0.129 mm²] to 12 [cross-section: 3.309 mm²] Stripping length: 10 to 11 mm 
Connection method - Loosen the screw with a flat blade screwdriver. - Insert the wire into the wire insertion hole. - Tighten the screw with the flat blade screwdriver. Screw size: M2.5 Recommended tightening torque: 0.43 to 0.50 N·m (4.3 to 5.0 kgf·cm)		Connection method - While pressing the button with the flat blade screwdriver, insert the wire into the wire insertion hole. - The wire is fixed to the connector when the flat blade screwdriver is released from the button.
 NOTE After the wire has been connected, pull the wire gently to ensure it is firmly secured.		

■ Dimensions (When connector plug is fitted)

(Unit: mm)

